



## SEATPOST INSTALLATION INSTRUCTIONS

THANK YOU FOR SELECTING A NEW NUKEPROOF SEATPOST.

With proper care and installation, it will give you trouble-free, enjoyable use. In order to maximise the safe enjoyment of this product, you should read and carefully follow the following installation instructions and warnings. Failure to do so could result in unexpected wear and or failure, possibly resulting injury. We recommend having your parts fitted by a qualified bicycle mechanic. Nukeproof assumes no responsibility for malfunction or injury due to faulty installation.

### SEATPOST INSTALLATION INSTRUCTIONS:

---

Note: Prior to installation please make certain that the seatpost's diameter matches the inside diameter (I.D.) of your frame's seat tube before starting the installation process. If it matches continue to the next steps;

1. Remove the existing seatpost and/or saddle, if necessary;
2. Loosen the saddle clamp bolt, leaving the bolt threaded halfway through the nut;
3. Place the saddle's rails into the lower half (cradle) of the clamp. Adjust the upper half of the clamp so that it fits onto the tops of the rails.
4. Tighten the seat clamp to the correct torque. Check your seatclamp manufacturers torque settings. Be careful not to tighten beyond these maximum limits, as damage to both the seatpost and saddle rails could result;
5. Check that the installed seatpost and saddle do not rotate or slip when pressure is applied to them and ensure that the ridges inside the clamp are matched to the saddle rail.

### "LIMITED WARRANTY"

---

*Nukeproof warrants this product to be free from defects in materials and workmanship for a two-year period from the date of original retail purchase. This warranty is extended only to the original owner of the product. Proof of purchase is required for any warranty service, so be sure to keep your receipt.*

For full warranty terms and conditions visit <http://nukeproof.com/warranty/>