

NUKEPROOF

HOW TO FIT NUKEPROOF GARMIN MOUNT

TOOLS REQUIRED

- 4mm hex key
- 5mm hex key
- 2.5mm hex key
- Additional headset spacer (not always required)

STEP BY STEP INSTRUCTIONS:



1. Remove the 2x small bolts from the Garmin mount using the 2.5mm hex key and set somewhere safe.



2. Remove the plastic insert by pushing the top cap bolt upwards and set somewhere safe.




3. Remove the top cap bolt on your bike. This usually requires a 5mm hex key.



4. Loosen your stem's steerer bolts a couple of turns using the correct hex key to free up the headset.



5. Your steerer tube should sit approx. 3mm lower than the top of the stem or top headset spacer. This is the point where you may need an additional headset spacer to achieve this. If you do not do this, the Garmin mount will hit the steerer and you will not be able to tension your headset correctly.

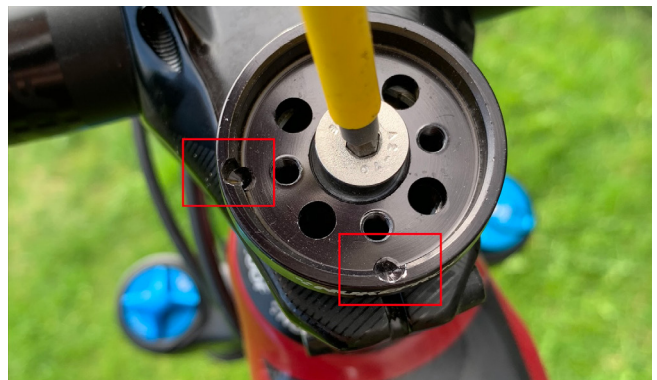

6. Place your Garmin top cap mount on to the bike with and tighten the bolt using the 4mm hex key to tension the headset in the usual way to remove all play. **Note: The two cut outs in the mount which should be placed at 6 o'clock and 9 o'clock position.**



7. Retighten stem steerer bolts.



Garmin



Wahoo

8. Plastic the plastic disc into the top cap. Not the position of the notch and set up as per photo's above for your device.



9. Refit and tighten the two small screws using the 2.5mm hex key.

Your Garmin mount is now fitted, and you are ready to ride.