VITUS DESCRIPTION	MANUFACTURE PART #	QTY	DESCRIPTION
DT PROTECTOR	NOT ON DRAWING	-	KIT TO REPLACE THE DT PROTECTOR ON ALL ESOMMET FRAMES (3M BACKING, NO BOLTS REQUIRED)
CS/SS PROTECTOR KIT	NOT ON DRAWING	-	KIT TO REPLACE THE CHAINSTAY, DROPOUT & SEATSTAY PROTECTORS ON ALL ESOMMET FRAMES (3M BACKING, NO BOLTS REQUIRED)
V-LINK SEATTUBE PIVOT BOLT KIT	ASEE-LAX	1	KIT TO REPLACE THE BOLT, WASHER, SPACERS & AXLE OF THE MAIN PIVOT ON THE SUSPENSION LINKAGE ON ALL ESOMMET FRAMES. NO BEARINGS INCLUDED.
	VTA-LWS	2	
	ASEE-LCP	1	
	M8x16L-M	1	
MOTOR BOLT KIT	MB-T40-18L	6	KIT TO REPLACE ALL 6 MOTOR MOUNTING BOLTS ON ALL ESOMMET FRAMES.
V-LINK SS/HORSTLINK BOLT KIT	ASEE-SNT	2	KIT TO REPLACE THE BOLT, WASHER, SPACER & THREADED AXLE OF THE REAR PIVOT ON THE SUSPENSION LINKAGE ON ALL ESOMMET FRAMES. THIS KIT IS FOR BOTH SIDES (2 SETS OF PARTS). THE SAME KIT CAN ALSO BE USED TO REPLACE THE PIVOT HARDARE ON THE V-LINK/SEATSTAY PIVOT. THIS KIT IS FOR BOTH SIDES (2 SETS OF PARTS). NO BEARINGS INCLUDED.
	ASEE-LWS	6	
	ASEE-SAX-26L	2	
INTERNAL CABLE GROMMET KIT	CABLE GUIDE INSERT	3	KIT TO REPLACE THE RUBBER AND PLASTIC CABLE GUIDE PARTS ON BOTH SIDES OF THE DOWNTUBE AND SEATSTAYS ON ALL ESOMMET FRAMES.
	YF-W16	1	
	CC270-1	1	
MAIN PIVOT BOLT KIT	M6x25L-P-S	1	KIT TO REPLACE THE AXLE ASSEMBLY FOR THE MAIN PIVOT FOR ALL ALL ESOMMET FRAMES. NO BEARINGS INCLUDED.
	6x10x1t	1	
	SEE-MAX	1	
	ASEE-BWS	1	
MOTOR PROTECTOR	NOT ON DRAWING	-	KIT TO REPLACE THE BASHGUARD AND BOLTS ON ALL ESOMMET BIKES EQUIPPED WITH THE SHIMANO E8000 MOTOR. NOTE: NOT COMPATIBLE WITH BIKES FITTED WITH THE SHIMANO E7000 MOTOR.
SHOCK MUDGUARD AND BOLT	NOT ON DRAWING	-	KIT TO REPLACE THE PLASTIC MUDGUARD AND MOUNTING BOLT ON ALL ESOMMET FRAMES.
HANGER 3 - ESOMMET 2018-19	C7A-HG-S1	1	ONLINE ALREADY
	C9B-ANT-1	1	
TRUNNION MOUNT SHOCK BOLT KIT 2018+	VTA-TR	1	ALL VITUS FRAMES WITH TRUNNION MOUNT SHOCKS DOMINER 2019 ESCARPE/SOMMET 2018 SOMMET 29 2020 ESOMMET 2018
	VPA-BWS	1	
SHOCK BOLT KIT	ATRB-SBT	1	THIS IS A SINGLE SHOCK BOLT FOR THE FOLLOWING VITUS SUSPENSION FRAMES ESCARPE 2015-2017 - REPLACEMENT FOR BOTH TOP AND BOTTOM SHOCK BOLTS SOMMET 2015-2017 - REPLACEMENT FOR BOTH TOP AND BOTTOM SHOCK BOLTS DOMINER 2016-2018 - REPLACEMENT FOR BOTH TOP AND BOTTOM SHOCK BOLTS ESCARPE 2018+ (SEE NOTE BELOW) SOMMET 2018+ (SEE NOTE BELOW) ESOMMET 2018+ (SEE NOTE BELOW) - REPLACEMENT FOR BOTTOM SHOCK BOLT (TO REPLACE THE TOP SHOCK BOLT PLEASE USE TRUNNION MOUNT SHOCK BOLT KIT 2018+)

RECCOMENDED TORQUE VALUES	
SHOCK BOLTS	15NM
V-LINK PIVOT	15NM
V-LINK SEAT STAYS	15NM
HORST LINK	6NM
MAIN PIVOT	6NM
HANGER	3NM
CABLE GUIDES	4NM

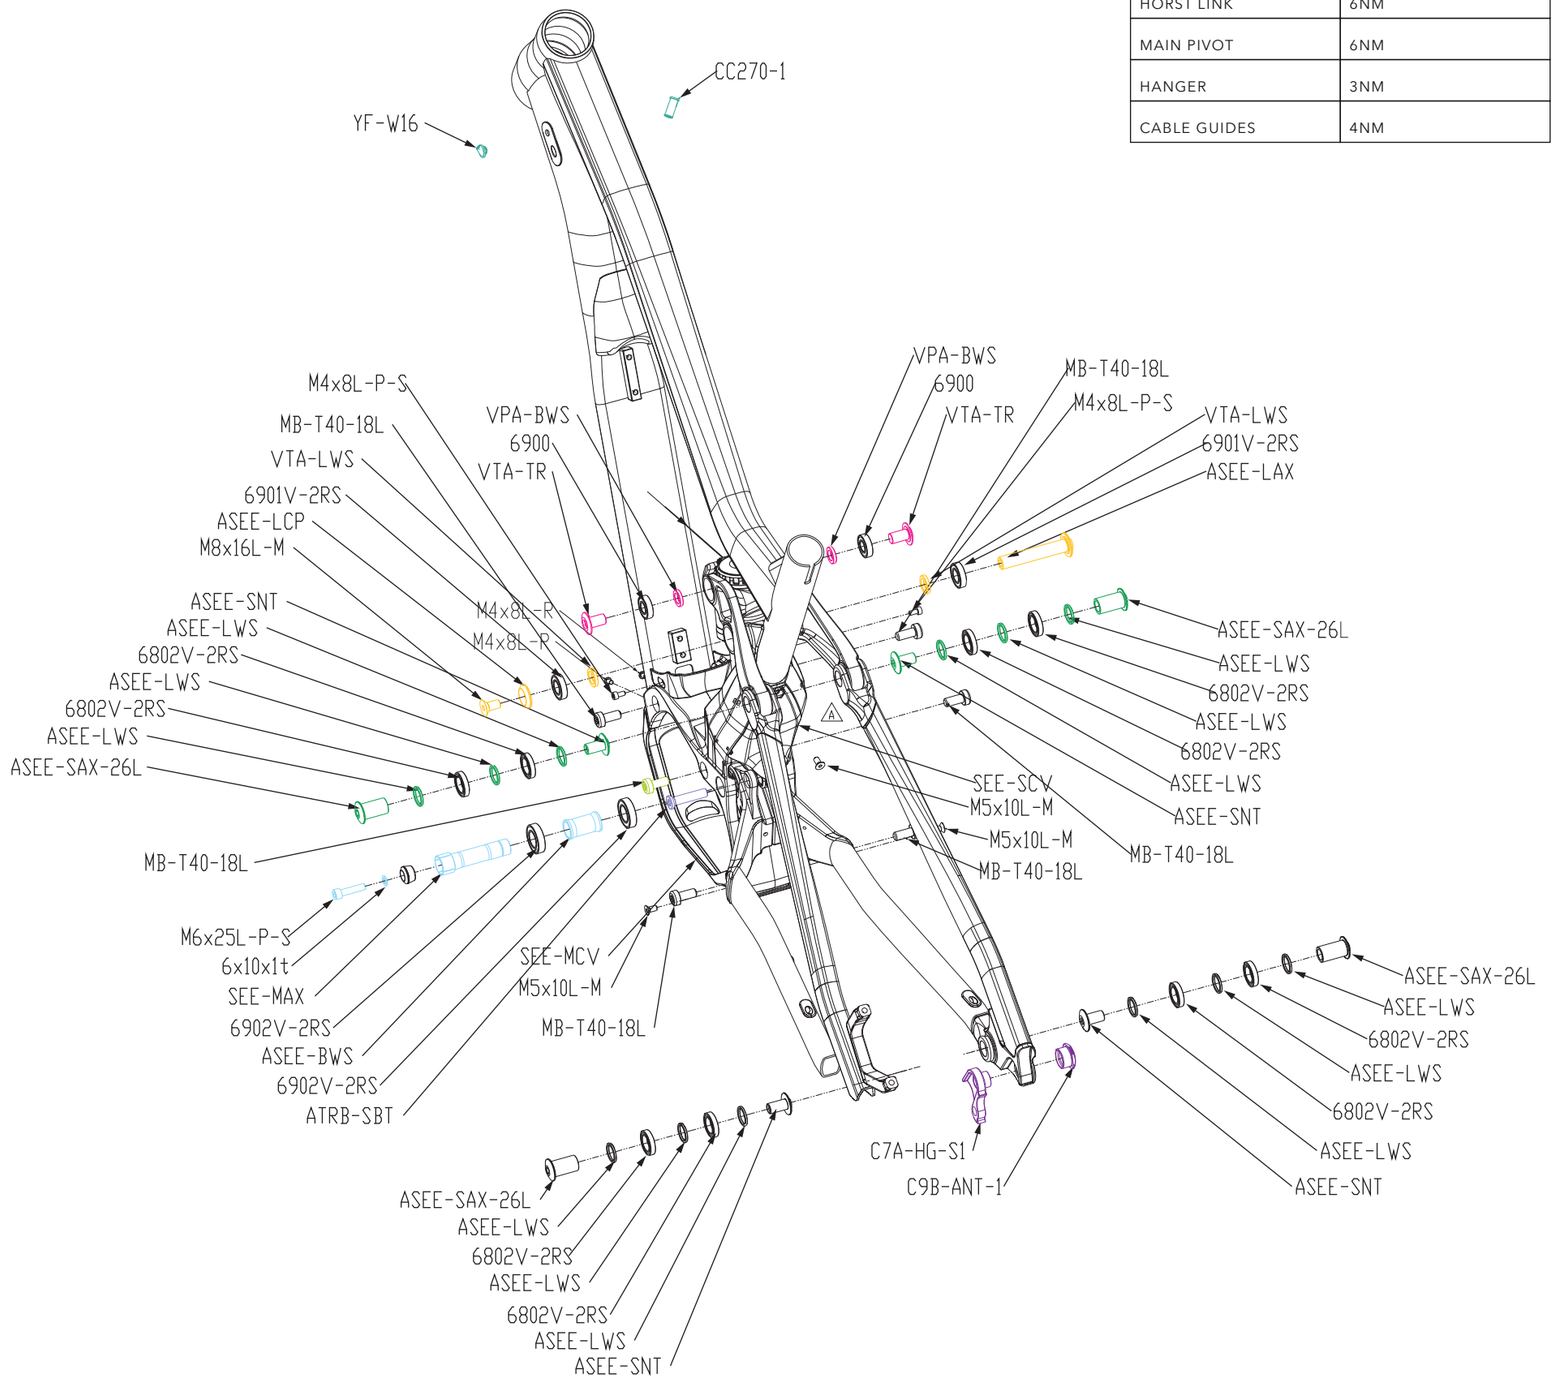

E-SOMMET